

Aircraft Belts, INC.

Part Number	DOC#	Description
Electrical P/Ns		
2510-0, -1, -2, -3, -4, -5, -6, -7, -10, -11, -12, -13, -14, -15, -16, -17	2510	Reading Light
2520-00, -01, -03, -05, -07, -08, -09, -10, -11, -12, -13, -20	2520	Reading Light
2524-0, -1, -3, -5, -7, -8, -10	2524	Reading Light
2585-0	2585	Reading Light
3510-01, -02, -03, -04, -05, -06, -07, -08, -09, -10, -11	3510	Reading Light
5500-01, -02, -03, -04, -05, -06, -07, -08	A664TP	Reading Light
5730-00, -01, -02, -03	A695TP	Reading Light
Mechanical P/Ns		
1292-1, -2, -3, -4, -5	ATP1292	Air Outlet
1755-0, -1, -2, -3, -11, -500, -501	1755	Air Outlet
2533-1	2533	Air Outlet
2940-00, -01, -02	2940	Air Outlet
2960-0, -1, -2, -4	2960	Air Outlet
2970-00, -01, -02, -03, -04	2970	Air Outlet

Firstmark

Part Number	PUB#	Description
Instruments		
FGIA21	95-4578	TANK UNIT ASSY
FG200B1 THRU 32	95-4078B	TANK UNIT ASSY
FG243AI, 2,4	95-3954C	TANK UNIT
FG150LI THRU 14	95-4775	TANK UNIT ASSY
FG120PI THRU 40, 42, 43	95-4774	TANK UNIT ASSY
FG150J9 THRU 13, 18 THRU 20	95-3953	TANK UNIT ASSY
FG150J22 THRU 39	95-3953	TANK UNIT ASSY
FG6C4	M15-2193-012	FUEL QUALITY COMP
FG6EI	95-9205	TANK UNIT AND COMPENSATOR
FG272AI	95-4120A-1	TANK UNIT AND COMPENSATOR
FG120L14 THRU 35, 38 THRU 48, 50 THRU 76, 78 THRU 84, 86 THRU 100	95-3952	TANK UNIT ASSY
FG250A4	95-4379A	TANK UNIT
FG220A77, 88,	95-4393A	TANK UNIT ASSY
620359	15-3141-04	THIN FLUX VALVE
620783	15-3141-04	COMPENSATOR
656520	A09-3321-014	FLUX VALVE ASSY

Capabilities List

Part Number	PUB#	Description
Instruments		
656767	A09-3321-014	COMPENSATOR ASSY
FG200A83, A97, A104	M15-971 I-006	FUEL TANK UNIT
FG220A224, A225, A272	M15-971 I-006	FUEL TANK UNIT
FG220A278, A279, A280	MIS-9711-006	FUEL TANK. IJNIT
FG250A47, A53, ASS	M15-971 I-006	FUEL TANK. I.i"KIT
1775277	U-15-0309	TRANS INDUCT COMP
2575570-902	15-3141-18	FLUX VALVE INDEXED
2575570	15-3141-13	FLUX VALVE INDEXED
2575592	IS-3141-15	FLUX VALVE
2587794	15-3141-13	FLUX VALVE
2589419-902	15-3141-11	FLUX VALVE
2589419-901	15-3141-11	FLUX VALVE INDEX
2591438-901, -902	15-3141-12	SENSOR MAGNETIC
2592789-902	15-3132-01	AMPL ELEC CONTROL
2594484	A09-3321-014	FLUX VALVE ASSY
2961182-1	EB2992054	INDUCTION COMP TRANS
4002342 AND -901	15-3141-16	INDEXED FLUX VALVE
7010133	15-3141-04	FLUX VALVE ASSY
2961167-1	EB2992041	POSITION SENSOR
2960268-8,-9,-10	8B2992039	POSITION SENSOR
Accessory		
2960329-2, -3	32-1313-01	MOTOR- TACHOMETER - BRAKE
2960322-2, -3, -4	32-1313-01	MOTOR-TACHO:METER - BRAKE